


TMS122

Mounting instruction 安装说明

4441 000 62851c



Type NO. 型号	Lamp 光源	Length (L) 长度	Fix distance (D) 安装孔距	Voltage /Hz 电压/频率	Ballast 镇流器	Material 材质
TMS122	1×TL5 14W	573mm	485mm	220V~/ 50Hz	EBP/ EBS HFP/HFS EBC/ELB FBA	Prepainting steel sheet or Aluminium 进口彩钢板 或铝型材
TMS122	1×TL5 28W	1173mm	1085mm			
TMS122	2×TL5 14W	573mm	485mm			
TMS122	2×TL5 28W	1173mm	1085mm			

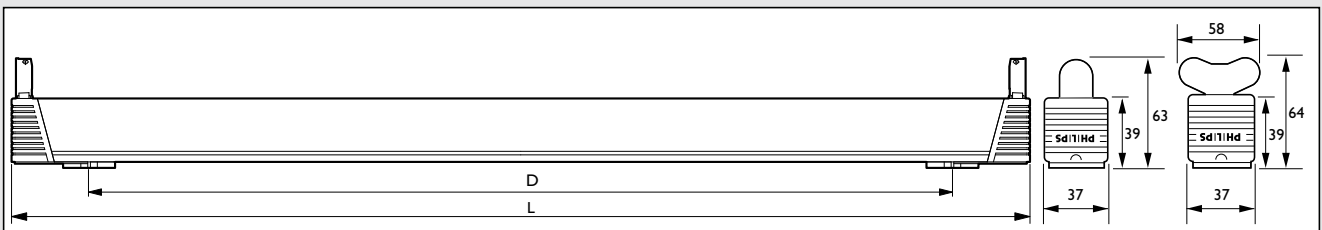

<p>1 Take off the screw out, then open the cover 拧下螺钉, 打开灯具的上盖</p>	<p>2 Pull the lampholder out and fix it 顶出并固定灯头</p>	<p>3 Pull wires through the hole, then connect the wires to the connector 将电源线从进线孔穿入并连接到接线排中</p>
<p>4 Screw the luminaire on the ceiling or walls 用螺钉将灯具固定在天花板或墙壁上</p>	<p>5 Close the cover and tighten the screw 合上上盖并拧紧螺钉</p>	<p>6 Put on lamp 装上灯管</p>

Philips Lighting Luminaires (Shanghai) Co., Ltd.
Address: No. 2688, Huyi Road, Jiading, Shanghai, China
Postalcode: 201801
飞利浦灯具(上海)有限公司
地址: 中国上海市嘉定区马陆镇沪宜公路2688号
邮编: 201801

PHILIPS